

Model AT Installation Guidelines

The Model AT is a completely automatic system.
No operator action is required for the extinguisher to activate.

Cylinder Mounting

We recommend that the extinguisher be mounted horizontally, cross wise in the vehicle, or vertically with the head up. Observe temperature limits on label. Mount so you can see the gauge and label. Tech inspectors like to verify the gauge readings and service info from the label. Typically the cylinder is mounted away from the area to be protected and the discharge line is run to the area to be protected.

Discharge Line and Fittings

The discharge line of the Model AT is a all metal welded hose assembly that is pressurized along with the cylinder. All of the fittings are either Swagelok or Duolok style fittings that provide a leak tight seal.

DO NOT loosen any of the fittings as the extinguisher will loose pressure.

Sensor

The sensor is a thermal type of sensor with a red guard. The color of the internal glass bulb indicates the temperature at with the extinguisher will activate. A jam nut is provided on the sensor for mounting.



Model AT10 Lightweight



Model AT10 Standard



Model AT5 Inverted



CALIFORNIA (HEADQUARTERS)

5165-C Commercial Circle, Concord, CA 94520
Phone: 800-400-2259 Fax: 925-405-0311
email: info@safecraft.com

NORTH CAROLINA (REPAIR FACILITY)

5980 Grand National Lane, Concord, NC 28027
Phone: 704-455-9422

NO WARRANTIES, EXPRESSED OR IMPLIED ARE MADE FOR THE SUITABILITY OF THIS PRODUCT FOR ANY PURPOSE. NO WARRANTY OR REPRESENTATION IS MADE AS TO THIS PRODUCTS ABILITY TO PROTECT THE USER FROM ANY INJURY OR DEATH. THE END USER MUST DETERMINE THE SUITABILITY OF THIS PRODUCT FOR THEIR APPLICATION.

Please Visit:

www.safecraft.com

to learn more about our complete line of extinguisher systems

Model AT

Installation Guidelines



DO NOT loosen fitting

DO NOT loosen Cap



Jam Nut used for mounting sensor

DO NOT loosen fitting

