


Model LT Push Cable Assembly


1. MOUNT BULKHEAD FITTING

Starting at the knob end, disassemble the cable end fittings by removing the safety pin with blue flag and unthreading the finger tight fasteners. Insert Bulkhead Fitting through bracket mounting hole. Slide on washer followed by 2 jam nuts

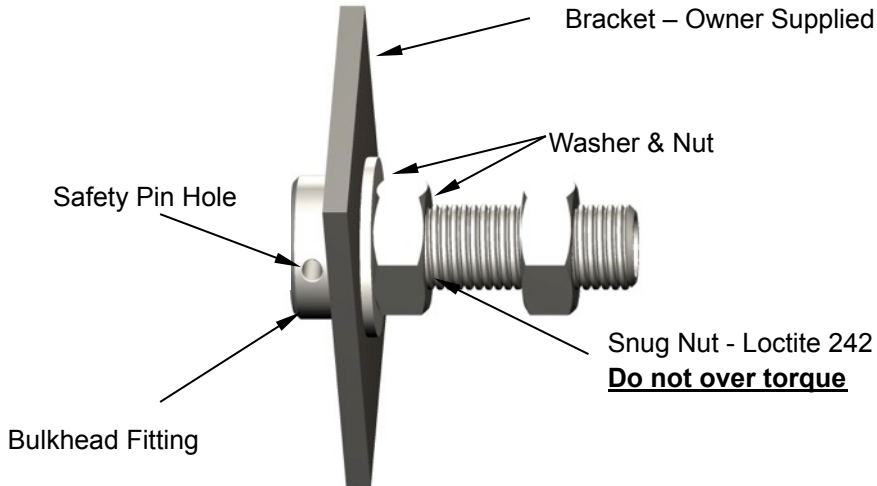

2. CABLE INSTALL AND ADJUSTMENT

Insert push cable shaft in from back of the bulkhead fitting and thread cable receptacle until the shaft protrudes about 1 inch. Adjustment is correct when safety pin/flag easily slips through the cross hole in the bulkhead fitting and engages the machined groove in the shaft.

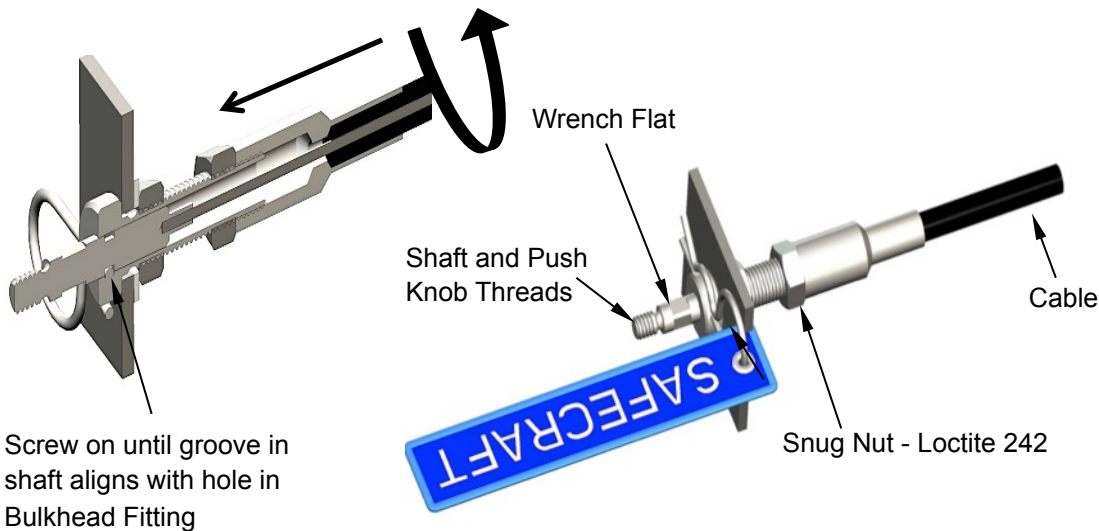

Model LT Push Cable



Model LT Push Cable

CALIFORNIA (HEADQUARTERS)

5165-C Commercial Circle, Concord, CA 94520
Phone: 800-400-2259 Fax: 925-405-0311
email: info@safecraft.com

NORTH CAROLINA (REPAIR FACILITY)

5980 Grand National Lane, Concord, NC 28027
Phone: 704-455-9422

NO WARRANTIES, EXPRESSED OR IMPLIED ARE MADE FOR THE SUITABILITY OF THIS PRODUCT FOR ANY PURPOSE. NO WARRANTY OR REPRESENTATION IS MADE AS TO THIS PRODUCTS ABILITY TO PROTECT THE USER FROM ANY INJURY OR DEATH. THE END USER MUST DETERMINE THE SUITABILITY OF THIS PRODUCT FOR THEIR APPLICATION.

Copyright 2014 by Safecraft Inc.

SAFECRAFT
SAFETY EQUIPMENT

Please Visit:

www.safecraft.com
to learn more about our
complete line of extinguisher
systems

Model LT Push Cable Assembly


3. PUSH KNOB INSTALL

Thread on the push knob and hold the shaft with an open-end wrench on the machined flats. We recommend a thread locker like Loctite 242 on the threads. Position the word FIRE on the knob so it is horizontal.



4. CABLE AND CYLINDER ATTACHMENT

Ensure that the safety pin with the "Remove Before Flight" streamer is installed in cable head. Lubricate the O Ring on push cable head and push the cable head into extinguisher valve.

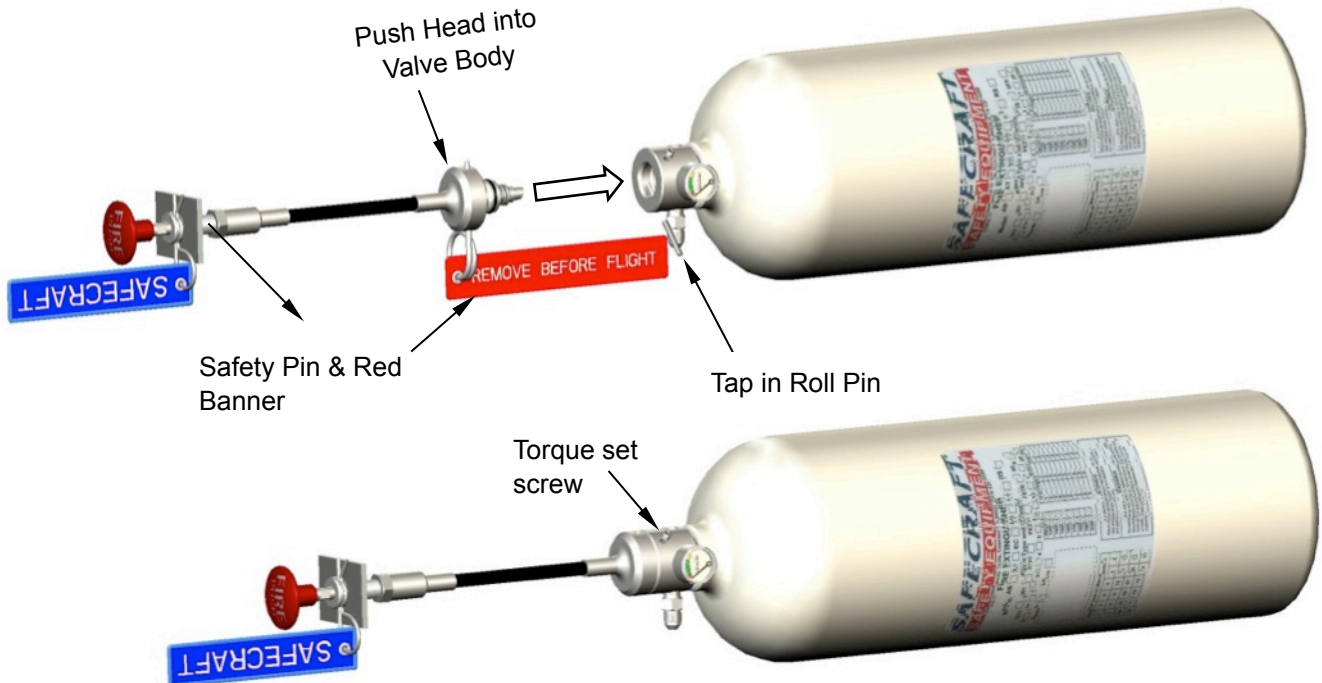

WARNING
TAKE OUT "REMOVE BEFORE FLIGHT" SAFETY PIN.
EXTINGUISHER WILL NOT FUNCTION WITH THIS PIN INSTALLED.